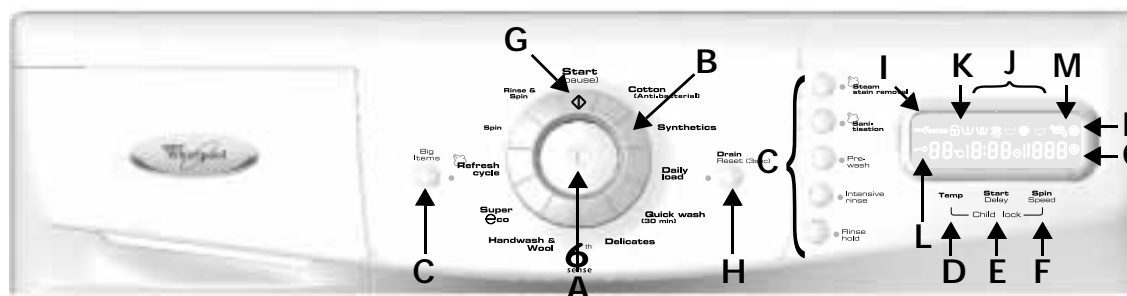


## PROGRAMME CHART



- A. "On/Off" button ①  
 B. Programme selection buttons  
 C. Option buttons  
 D. "Temperature" button  
 E. "Start delay" button  
 F. "Variable spin" button  
 G. "Start/Pause" button ②  
 H. "Drain/Reset (3sec)" button  
 I. Display



## J. Programme sequence indication



## K. "Door open" indication ③






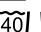
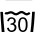


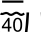
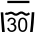
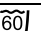
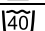
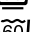
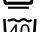
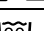
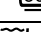
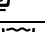



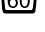

## L. "Child lock" indication ④

Your washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

## M. "Water tap closed" indication ⑤

## N. "Clean pump" indication ⑥

## O. "Service" indication ⑦

Programme	Tempe- rature °C	Care Labels	Max Load  kg	Type of wash/Notes  - For temperature selection, respect the manufacturer's recommendations on the care label	Detergents and additives			Special options						Start delay	Spin	
					Pre- wash 	Main wash 	Softener 	Big items	Steam stain removal <sup>2)</sup>	Steam Saniti- sation <sup>2)</sup>	Pre- wash	Intensive rinse	Rinse hold		Variable spin	Max Spin Speed rpm
<b>Cotton (Anti-bacterial)</b>	20 - 95 °C	   	8.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	*	Yes	*	—	*	*	*	*	*	*	*	max.
<b>Synthetics</b>	20 - 60 °C	   	3.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	*	1000 <sup>1)</sup>
<b>Daily load</b>	20 - 60 °C	   	6.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	—	—	—	—	*	*	*	*	max.
<b>Quick wash (30 min)</b>	20 - 30 °C		6.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	*	—	—	—	—	—	*	*	*	max.
<b>Delicates</b>	20 - 40 °C	 	2.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	*	Yes	*	—	—	—	*	—	*	*	*	1000 <sup>1)</sup>
<b>Handwash &amp; Wool</b>	20 - 40 °C	 	2.0	Textiles made of silk, linen, wool and viscose marked as “handwashable”, or woollens labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable and handwashable wool.	—	Yes	*	—	—	—	—	—	*	*	*	400 <sup>1)</sup>
<b>Super eco</b>	20 - 60 °C	 	8.0	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to “0” and start spin programme in the morning, or define programme start with “Start delay” accordingly.</i>	—	Yes	*	—	—	—	—	*	*	*	*	max.
<b>Steam Refresh</b>	—		1.0	Clean and dry laundry items made of cotton and/or synthetics which were already used. <i>Refreshes, reduces smells, moderates creasing and makes the items ready to wear or use within 20 minutes. After programme end, immediately put the laundry on hangers for 10 minutes before using. During this programme “St” appears on the display.</i>	—	—	—	—	—	—	—	—	*	—	—	—
<b>Spin</b>	—	—	8.0	<i>In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.</i>	—	—	—	—	—	—	—	—	*	*	*	max.
<b>Rinse &amp; Spin</b>	—	—	8.0	<i>Same as the last rinse and the final spin in the “Cotton” programme.</i>	—	—	*	—	—	—	—	*	*	*	*	max.
<b>Drain</b>	—	—	—	<i>Drain only - no spinning. Alternative method of terminating programme after “Rinse Hold”. Press “Drain/Reset (3sec)” and then “Start/Pause” to start the “Drain” programme.</i>	—	—	—	—	—	—	—	—	—	—	—	—

\* optional / Yes : dosing required

1) For improved garment care, spin speed is restricted in these programmes.

2) Only selectable within the temperature range of 40 to 60°C.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart.

M0702

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06077

## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton (Anti-bacterial)	95	8.0	82**	2.40	2:10
Cotton***	60	8.0	69	1.36	2:20
Cotton	40	8.0	77	0.85	2:05
Synthetics	60	3.5	48**	0.95	1:35
Synthetics	40	3.5	44	0.55	1:20
Daily load	40	6.0	79	0.70	1:00
Quick wash (30 min)	30	6.0	72	0.35	0:30
Delicates	30	2.5	60	0.45	0:50
Handwash / Wool	40	2.0	45	0.65	0:40
Handwash / Wool	30	2.0	45	0.35	0:36
<b>Super</b> Eco	60	8.0	75	0.95	4:00
Steam Refresh	—	1.0	0.5	0.20	0:10

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.


\* The time indicated on the display can deviate from the values in the table, because it takes into account the operating conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter “Detergent and Additives” in your Instructions for Use.

1. Push the **“On/Off”** button . The blue light circle signals that the washer is switched on.
2. Select the **desired programme** by pushing the corresponding programme button; it is marked by a blue light.
3. The **temperature** and **spin speed** indicated on the display can be altered by pressing the “Temperature” button or the “Variable spin” button.

## SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.


### “Big Items” button

- Select this option for washing big laundry items such as blankets made of synthetic fibres, bed covers filled with feathers or artificial fibres, sleeping bags, bathmats and similar.

### “Steam stain removal” button

- Treats the laundry with hot steam during the wash cycle in order to help removing stains.
- Selectable for laundry made of cotton and/or synthetics within temperature range of 40 to 60°C.

### “Steam sanitisation” button

- Eliminates bacteria and helps sanitizing the laundry.
- Appropriate for cotton and/or synthetic laundry items with care label  within temperature range of 40 to 60°C.
- Prolongs the programme by approx. half an hour to an hour, depending on the load size.

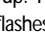
### “Prewash” button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

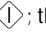
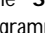
### “Intensive rinse” button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water or for washing baby linen, and helps people with allergies.

### “Rinse hold” button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
  - This option is particularly recommended for the programmes “Synthetics”, “Daily load” and “Delicates”.
  - It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
  - If you select “Rinse hold”, do not leave the laundry to soak for too long.
- Note:** The programme stops to “Rinse hold” at the time the “Rinse hold” symbol on the display lights up. The blue light under the **“Start/Pause”** button  flashes.

### Terminate the “Rinse hold” option:


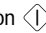
- Press the **“Start/Pause”** button ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, push the **“Drain/Reset (3sec)”** button and then the **“Start/Pause”** button  to start the Drain programme.

## “Variable spin” button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed “0” is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## START DELAY

The “Start delay” allows to run the machine at the consumer’s convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the “Start delay”.

- Select programme, temperature, spin speed and options.
- Press the “Start delay” button to select the delay time up to 23 hours.
- Press the **“Start/Pause”** button . The countdown of the delay time begins; the clock symbol next to the delay time and the dot between hours and minutes flash.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the **“Start/Pause”** button , the number of hours preselected can be reduced by pressing and holding the “Start delay” button. From 1 hour on, the delay time can also be reduced by minutes.

### To cancel the “Start delay”


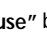
..before you press the **“Start/Pause”** button:

- Select another programme or press the **“Drain/Reset (3sec)”** button.

..after having pressed the **“Start/Pause”** button:

- Press the **“Drain/Reset (3sec)”** button for at least 3 seconds - the start delay time disappears from the display.

## PROGRAMME START

Open the tap and press the **“Start/Pause”** button . The blue light under the **“Start/Pause”** button  is on. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

## “DOOR OPEN” INDICATION

Before starting and after end of a programme, the symbol lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Cancel (Reset) a running programme before the end”.

## CHILD LOCK

You can lock the buttons of the control panel against improper use (e.g. by children).

- Press the temperature and the spin speed button simultaneously and hold them for at least 3 seconds. The key symbol on the display lights up.
- To unlock the buttons again: proceed in the same way.

## RED INDICATIONS ON THE DISPLAY

### “Water tap closed”

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the “Troubleshooting Guide” in the Instructions for Use.

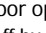

### “Clean pump”

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use (“Removing the Filter”).

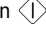

### “Service”

Lighting up of the “Service” indication can be caused by a fault in an electrical component. Refer to the “Troubleshooting Guide” in your Instructions for Use; if the fault persists, contact our After Sales Service.

## PROGRAMME END

- The symbols of the programme sequence indicator are dark, and the “Door open” symbol  lights up.
1. Switch the machine off by pushing **“On/Off”** .
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **“Start/Pause”** button  to pause the programme. The light flashes.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **“Start/Pause”** button  again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **“Drain/Reset (3sec)”** button cancels a programme before the end.

- Press the **“Drain/Reset (3sec)”** button for at least 3 seconds. Any existing water is drained out before the door can be opened. Caution! The washing might still be hot.